



myTecnoalarm app - Reconfiguration procedure



Rel. 1.0 - 12/2023


myTecnoalarm app - Reconfiguration procedure

Index	
Delete system	P. 3
Configuration with QR code (TCS)	P. 4
Manual configuration (DDNS)	P. 7


NB. The configuration data and/or the QR code must be requested from the installer who has carried out the installation.

Delete the system


1 - Open the app

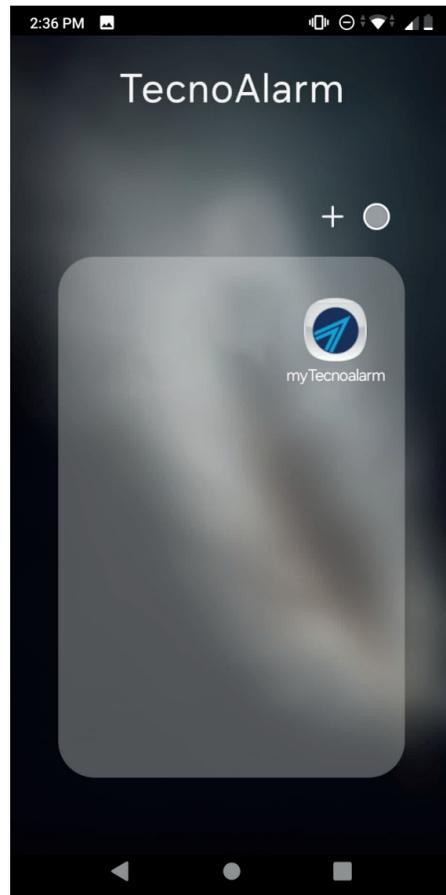


2 - Tap on the gear icon

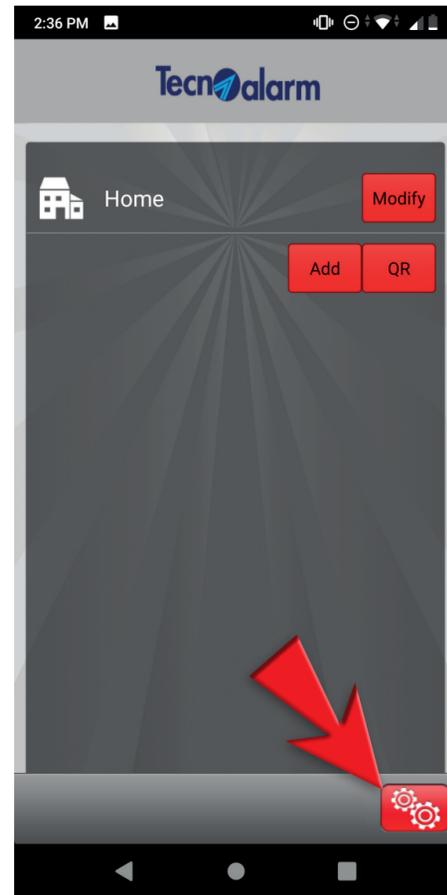

3 - Tap on **Modify**

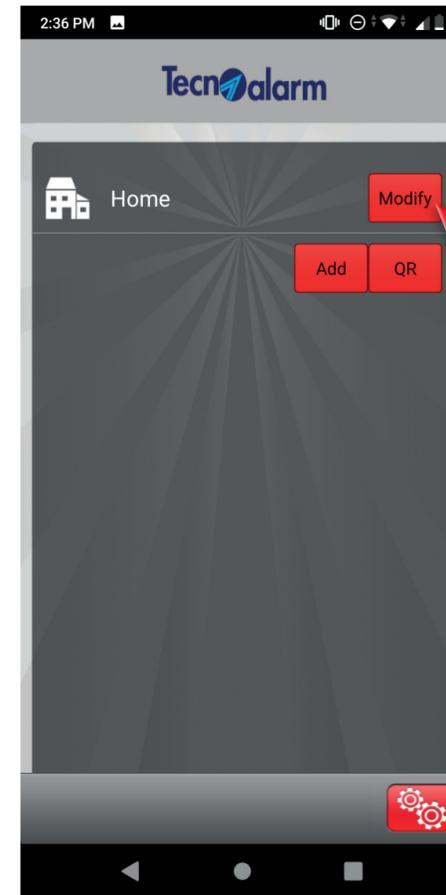


4 - Tap on the trash can icon

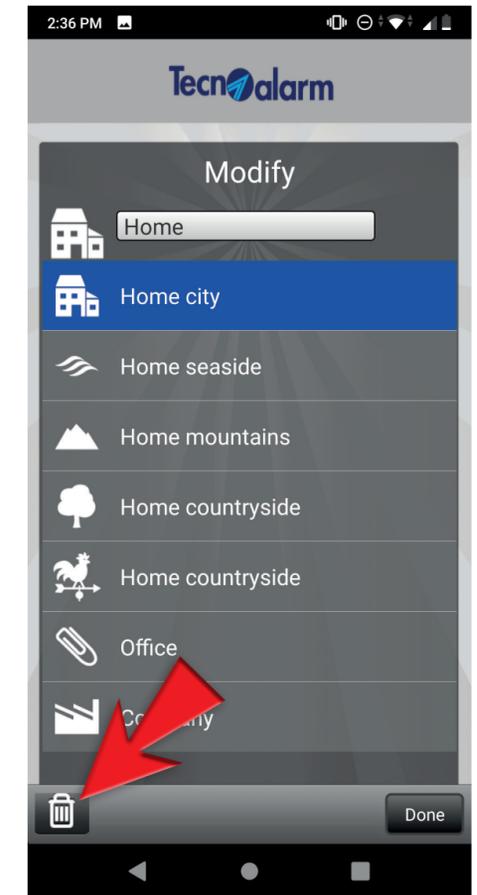


Configuration with QR code (TCS)


1 - Tap on the gear icon

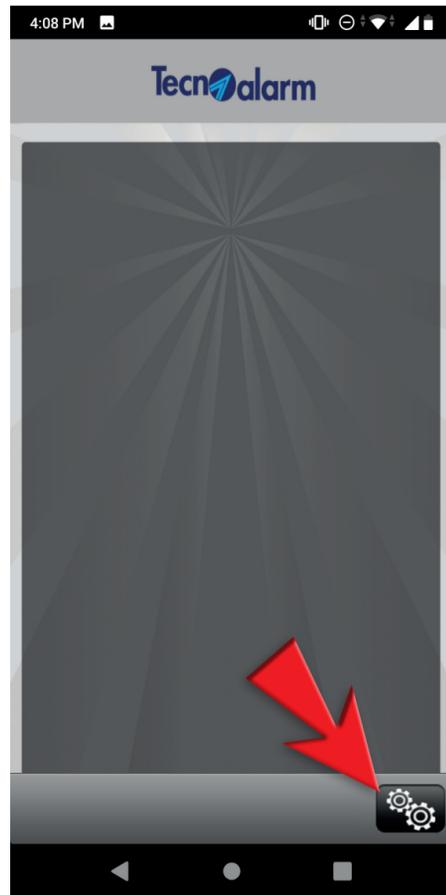


2 - Tap on **QR**

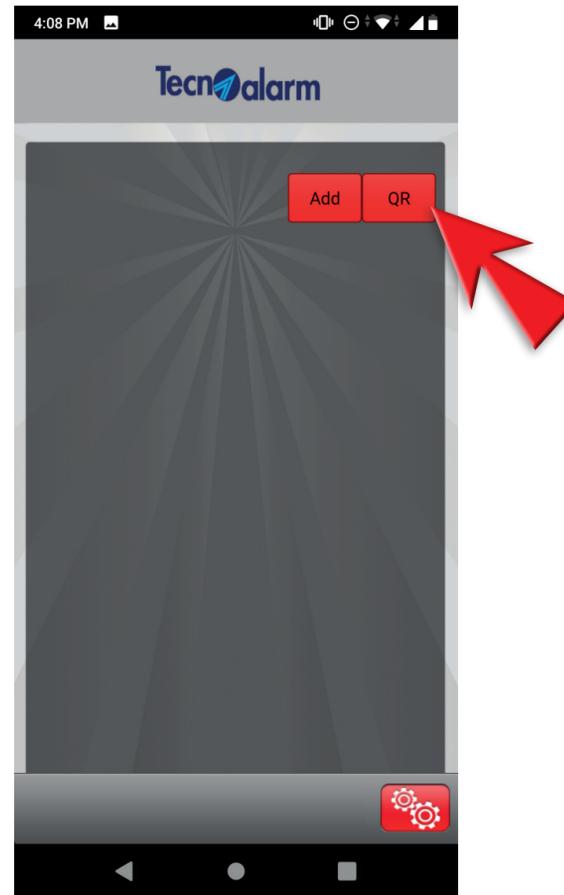

3 - Scan the QR code, enter the user code and tap on **Access**

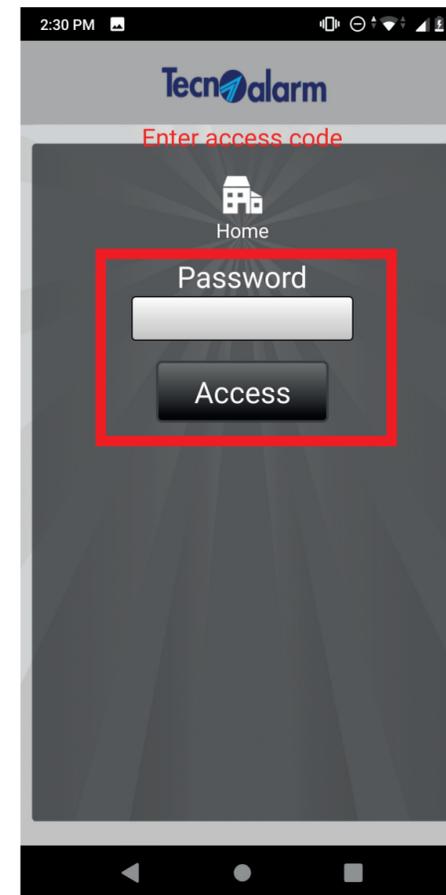


4 - Confirm the user code and tap on **Access**

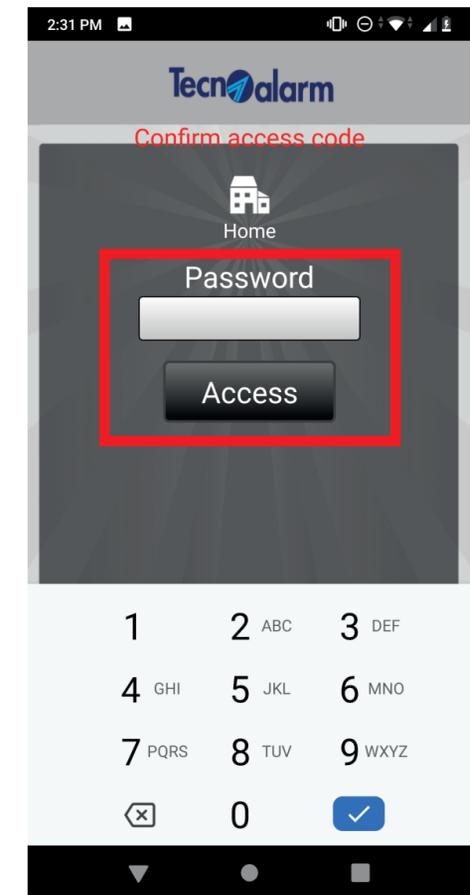


Configuration with QR code (TCS)


5 - The activation code is sent automatically by e-mail.
Tap on **OK**

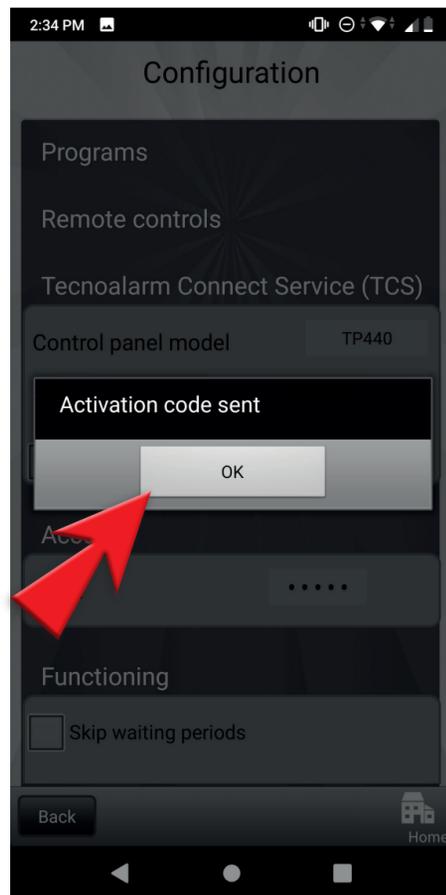


6 - Select **Subscription**

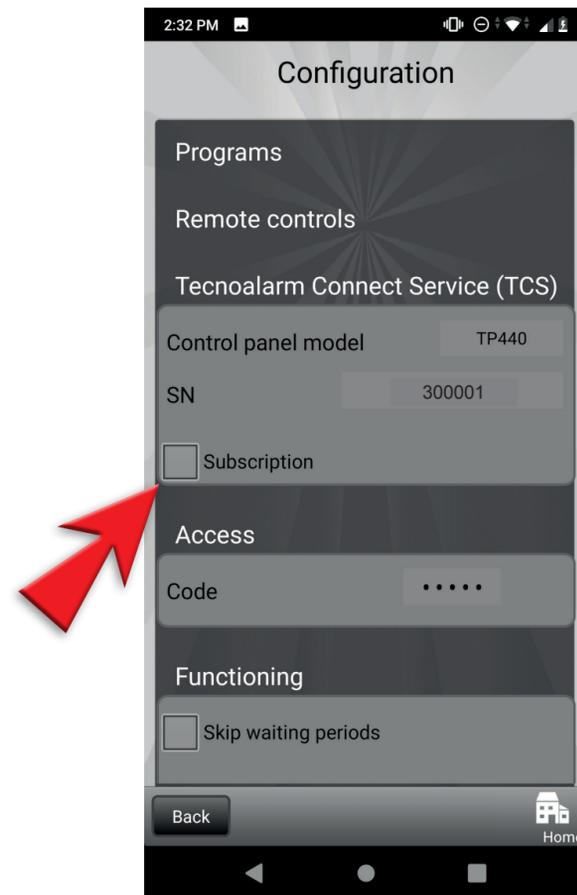

7 - Enter the activation code received by e-mail and tap on **YES**

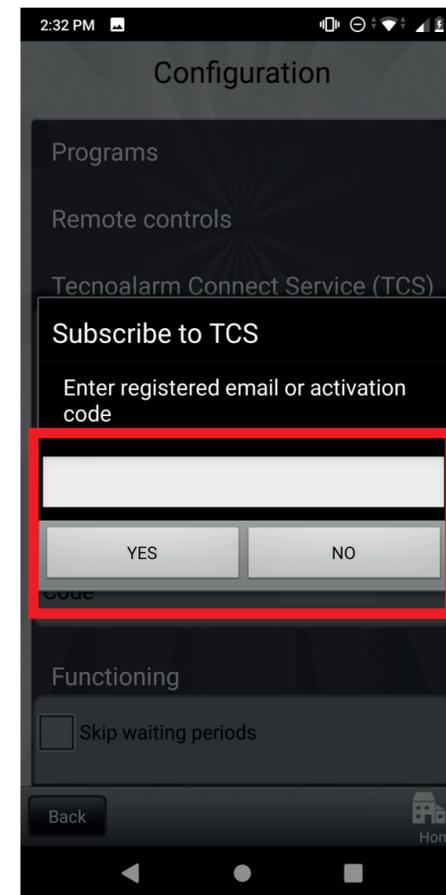


8 - Wait for subscription to be completed

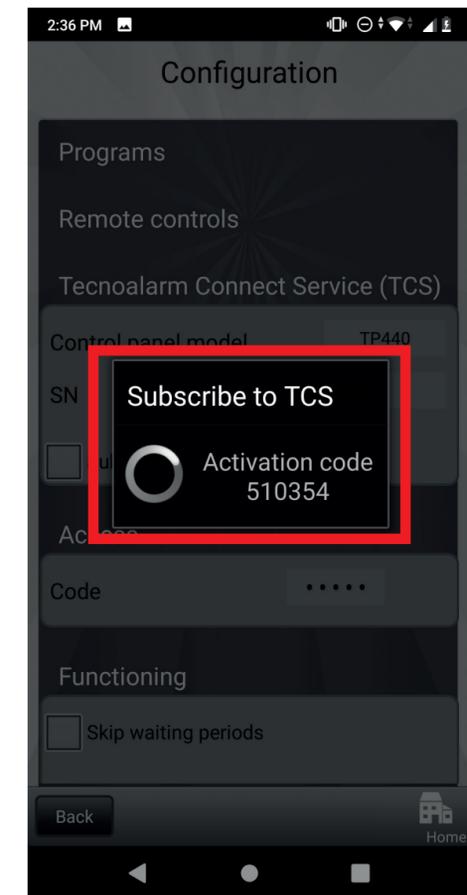


Configuration with QR code (TCS)


9 - Select the app's operating modes

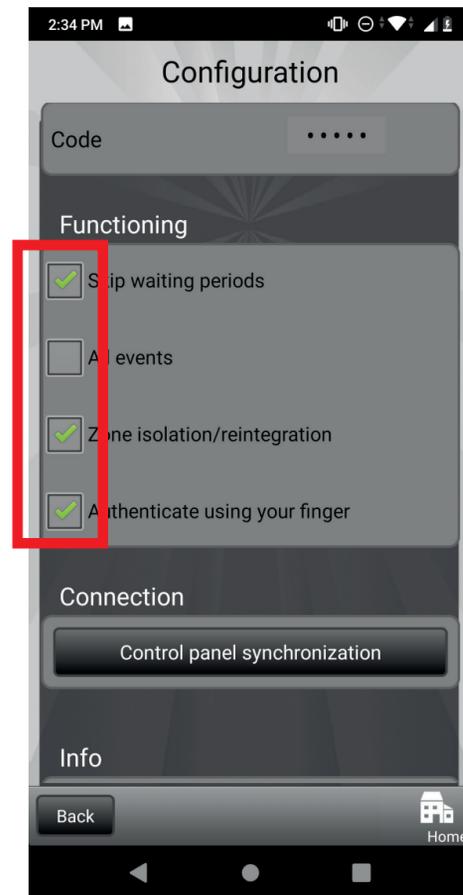

10 - Tap on **Control panel synchronization**

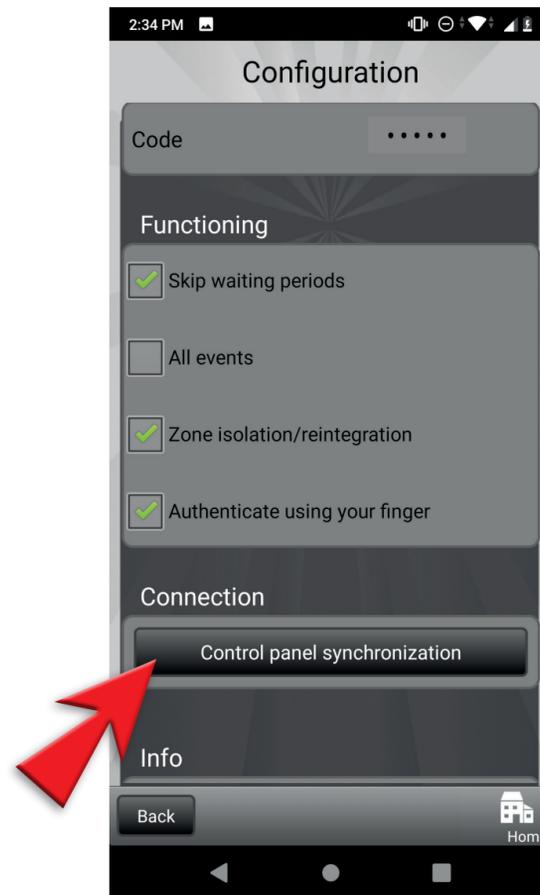


11 - Wait for synchronization to be completed

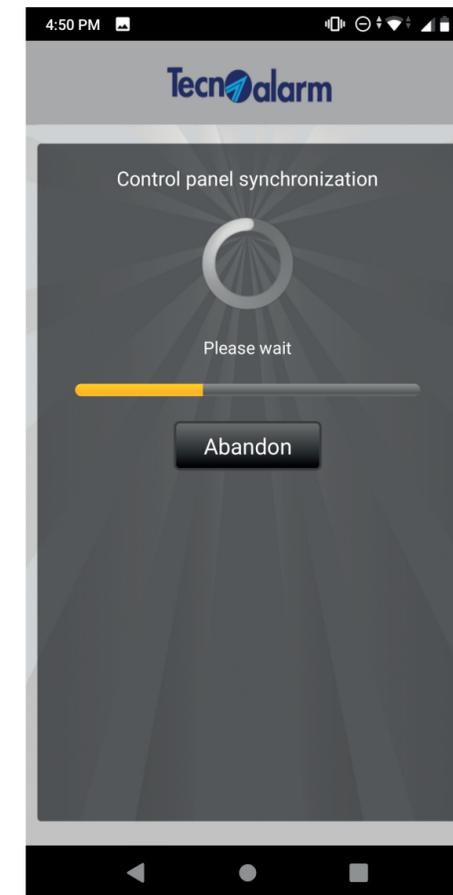


Manual configuration (DDNS)


1 - Tap on the gear icon

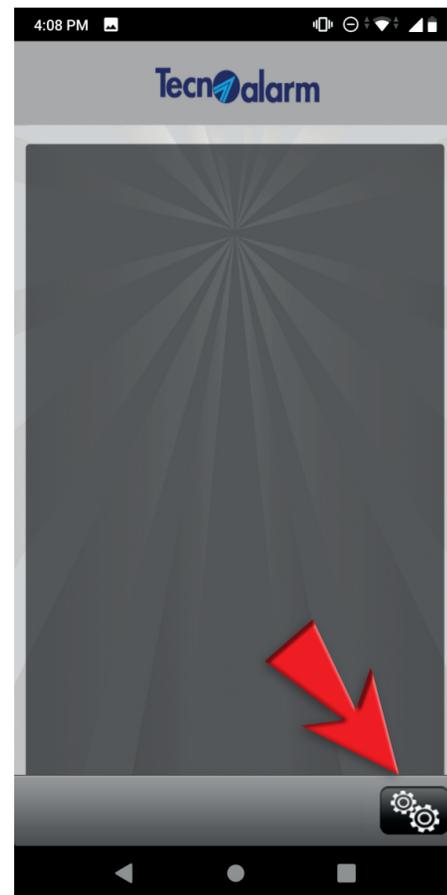


2 - Tap on **Add**

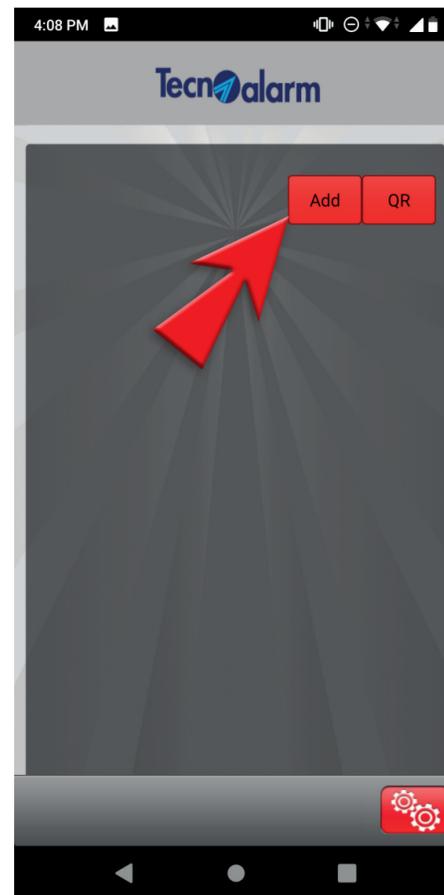

3 - Enter the name of the system and tap on **Done**

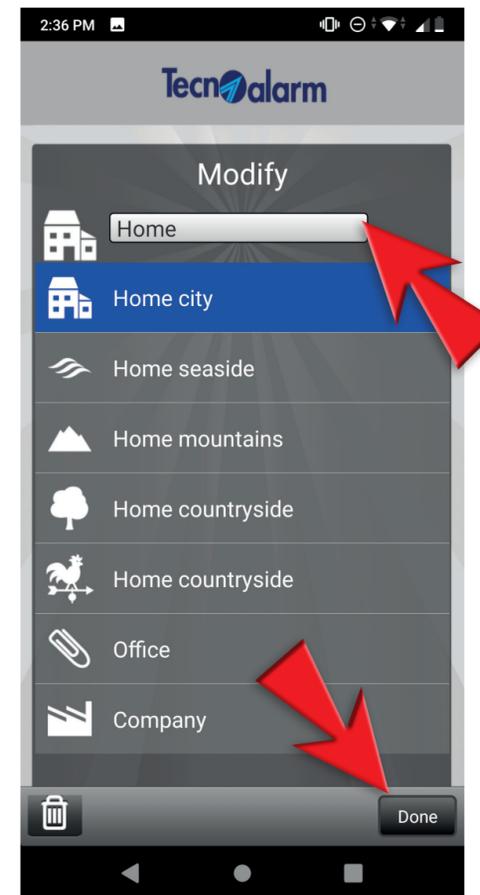


4 - Tap again on the gear icon

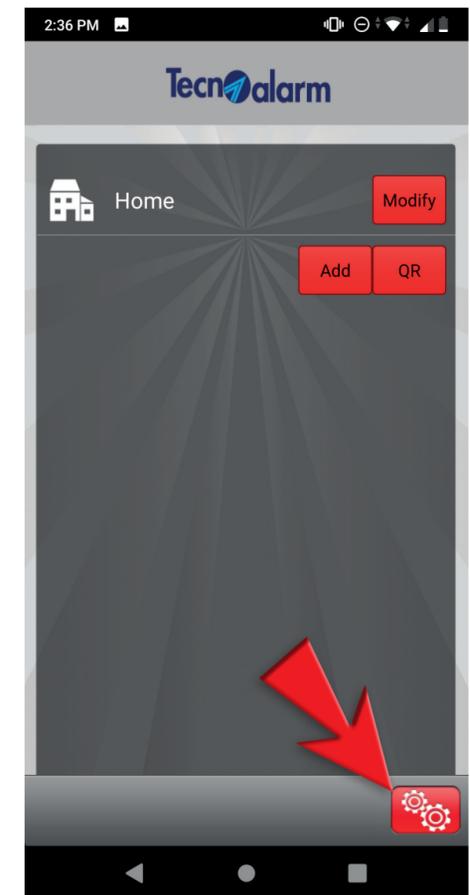


Manual configuration (DDNS)


5 - Enter the user code and tap on **Access**

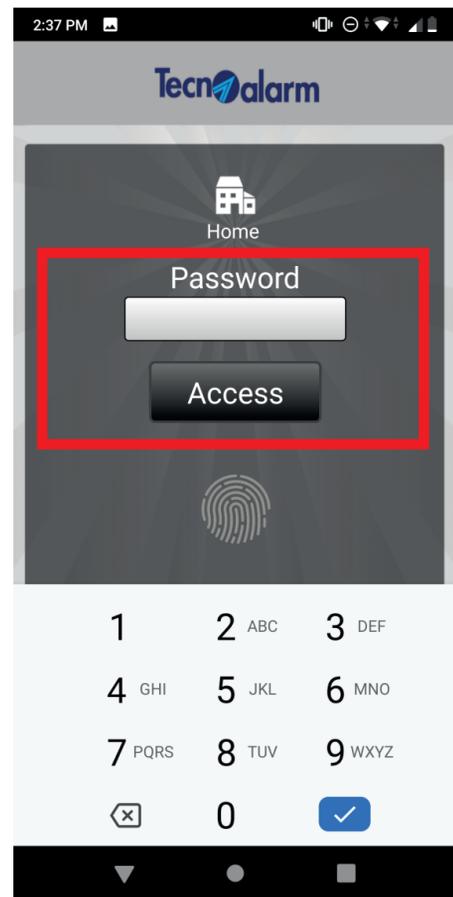


6 - Enter the IP address, port, user code, passphrase

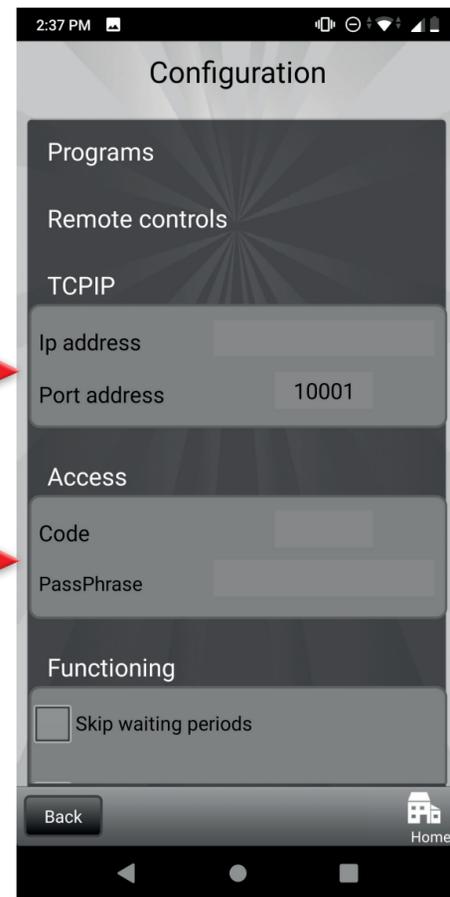

7 - Select the app's operating modes

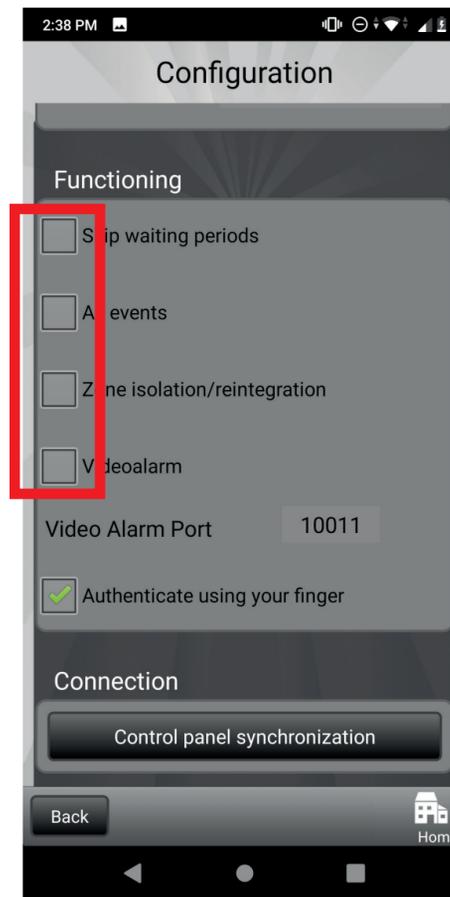

8 - Tap on **Control panel synchronization**

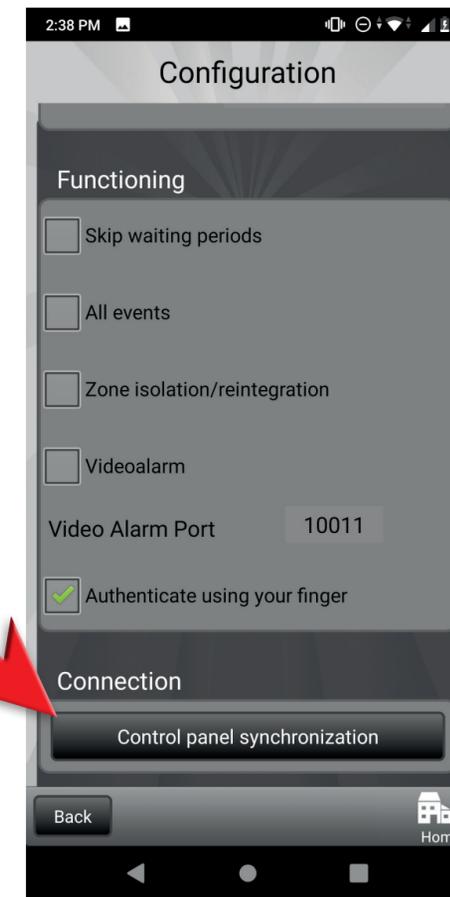

9 - Wait for synchronization to be completed



